

## Radio System Plus (RMC) with Bose Sound


From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



# Multimedia System Control Head, Information Electronics Control Module 1

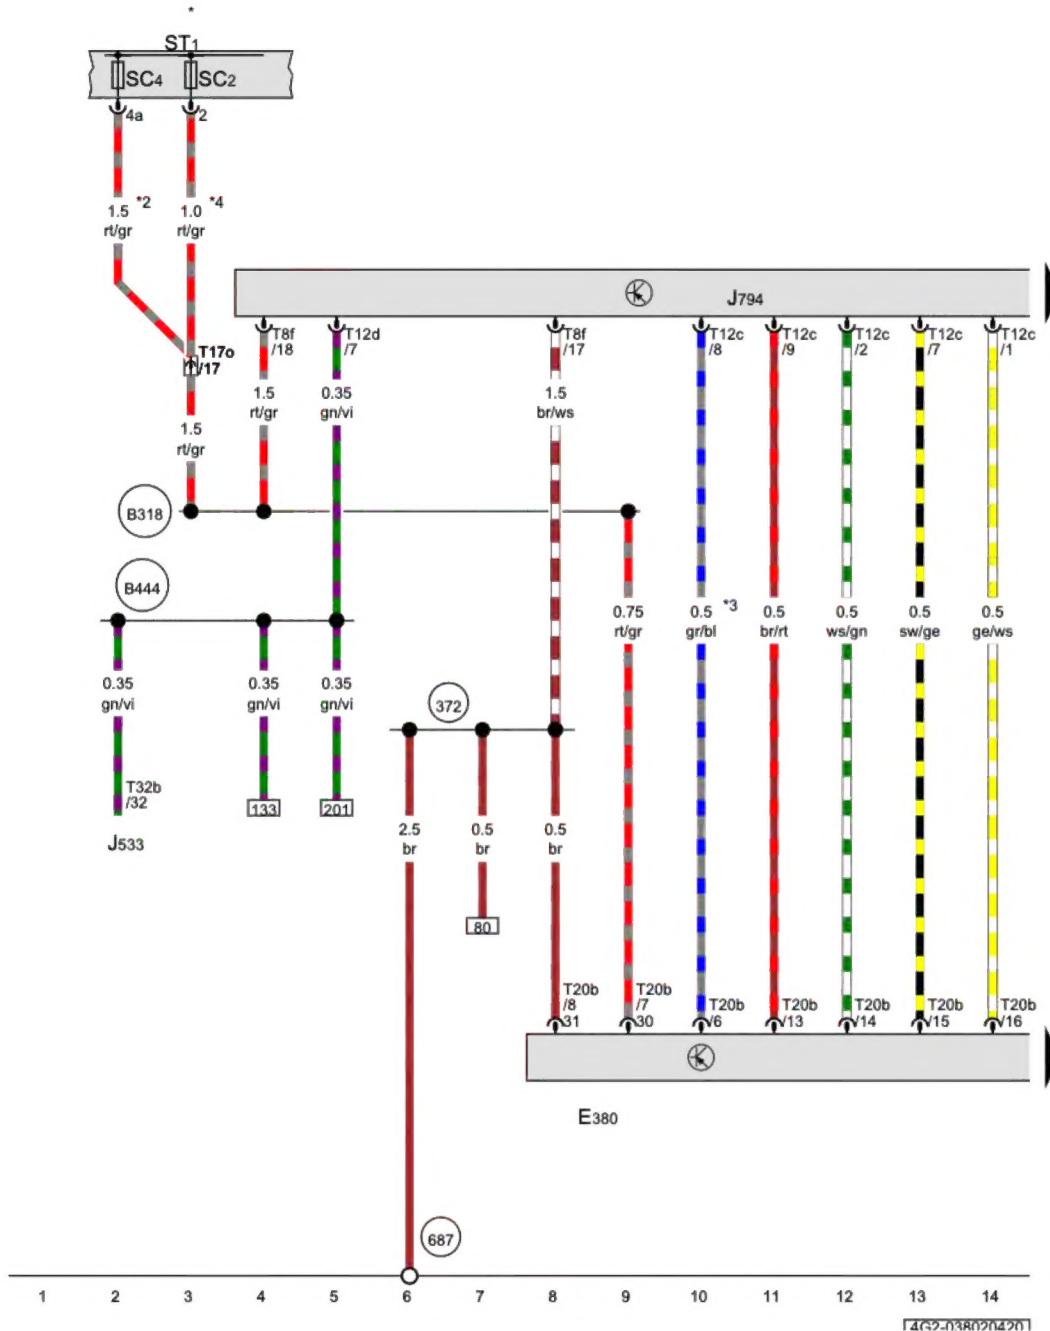

- E380 Multimedia System Control Head
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1
- ST1 Fuse Panel 1
- SC2 Fuse 2 (On Fuse Panel C)
- SC4 Fuse 4 (On Fuse Panel C)
- T8f 8-Pin Connector
- T12c 12-Pin Connector
- T12d 12-Pin Connector
- T17o 17-Pin Connector, In the Coupling Point in the Right Interior
- T20b 20-Pin Connector
- T32b 32-Pin Connector

- 372 Ground Connection 7 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B318 Positive Connection 4 (30a) (in Main Wiring Harness)
- B444 OBD Connection 1 (in Main Wiring Harness)

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Omitted as a Running Change
- \*3 Prompt Wire
- \*4 Running Change

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 vi = lilac  
 ge = yellow  
 or = orange  
 rs = pink

Copyright by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Multimedia System Control Head, Display Unit Button, Display -Open- Stop Switch, Instrument Cluster Control Module, Information Electronics Control Module 1, Display Opening/Closing Motor


- E380 Multimedia System Control Head
- E506 Display Unit Button
- F330 Display -Open- Stop Switch
- F331 Display -Closed- Stop Switch
- J285 Instrument Cluster Control Module
- J519 Vehicle Electrical System Control Module
- J794 Information Electronics Control Module 1
- T6q 6-Pin Connector
- T8o 8-Pin Connector
- T8p 8-Pin Connector, Behind the Left Front Center Console
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T20b 20-Pin Connector
- T32 32-Pin Connector
- T32c 32-Pin Connector
- V301 Display Opening/Closing Motor

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 373 Ground Connection 8 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- A175 Connection 58s (in Instrument Panel Wiring Harness)

\* For Vehicles with Cell Phone Preparation

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

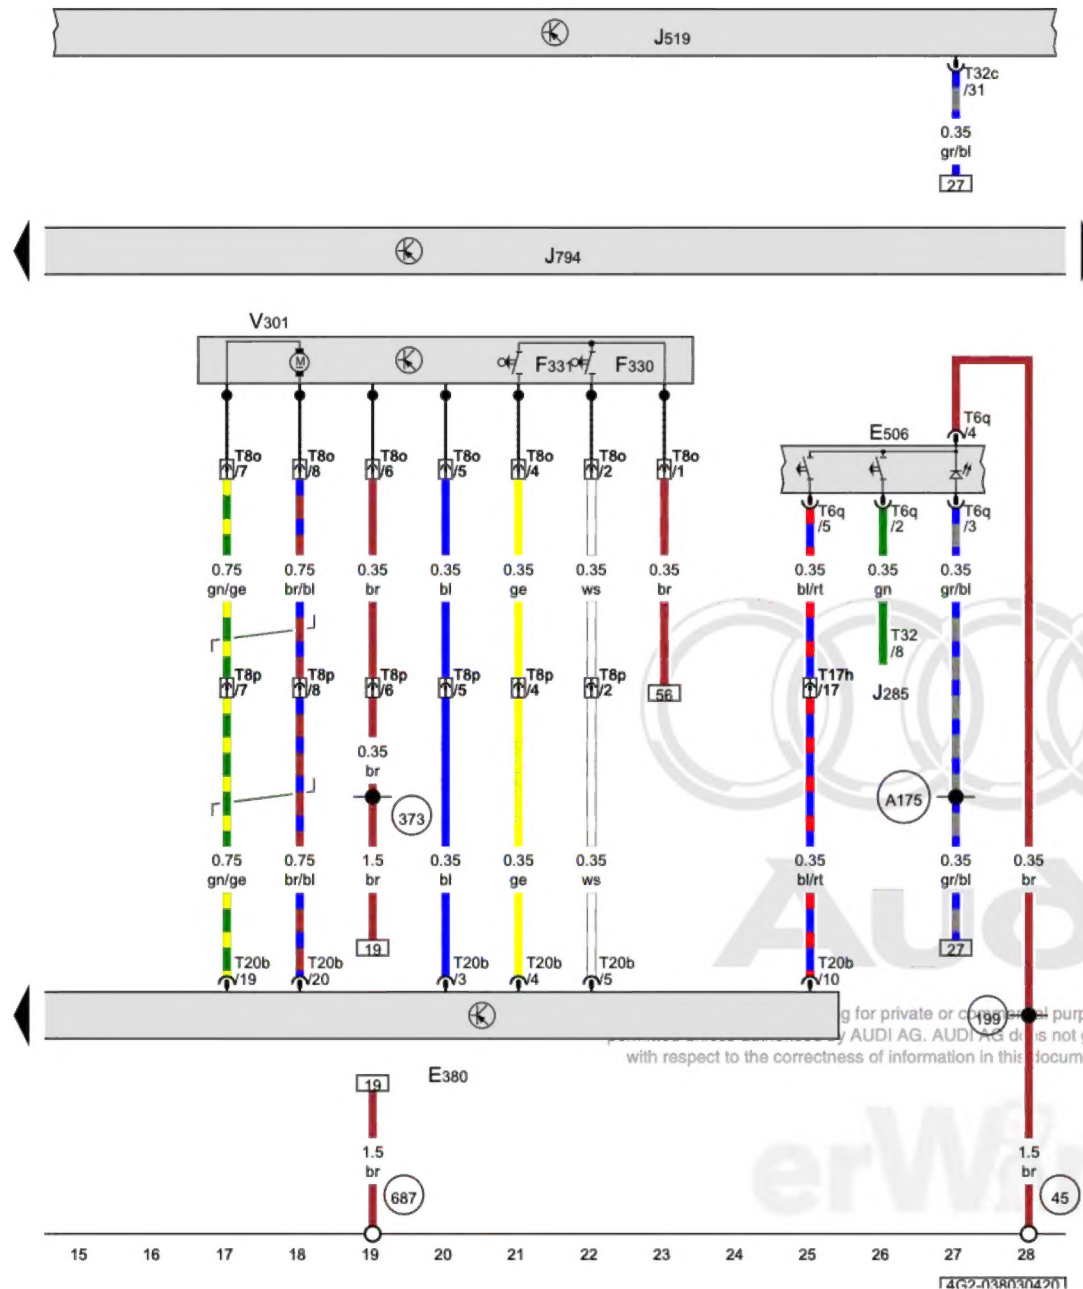

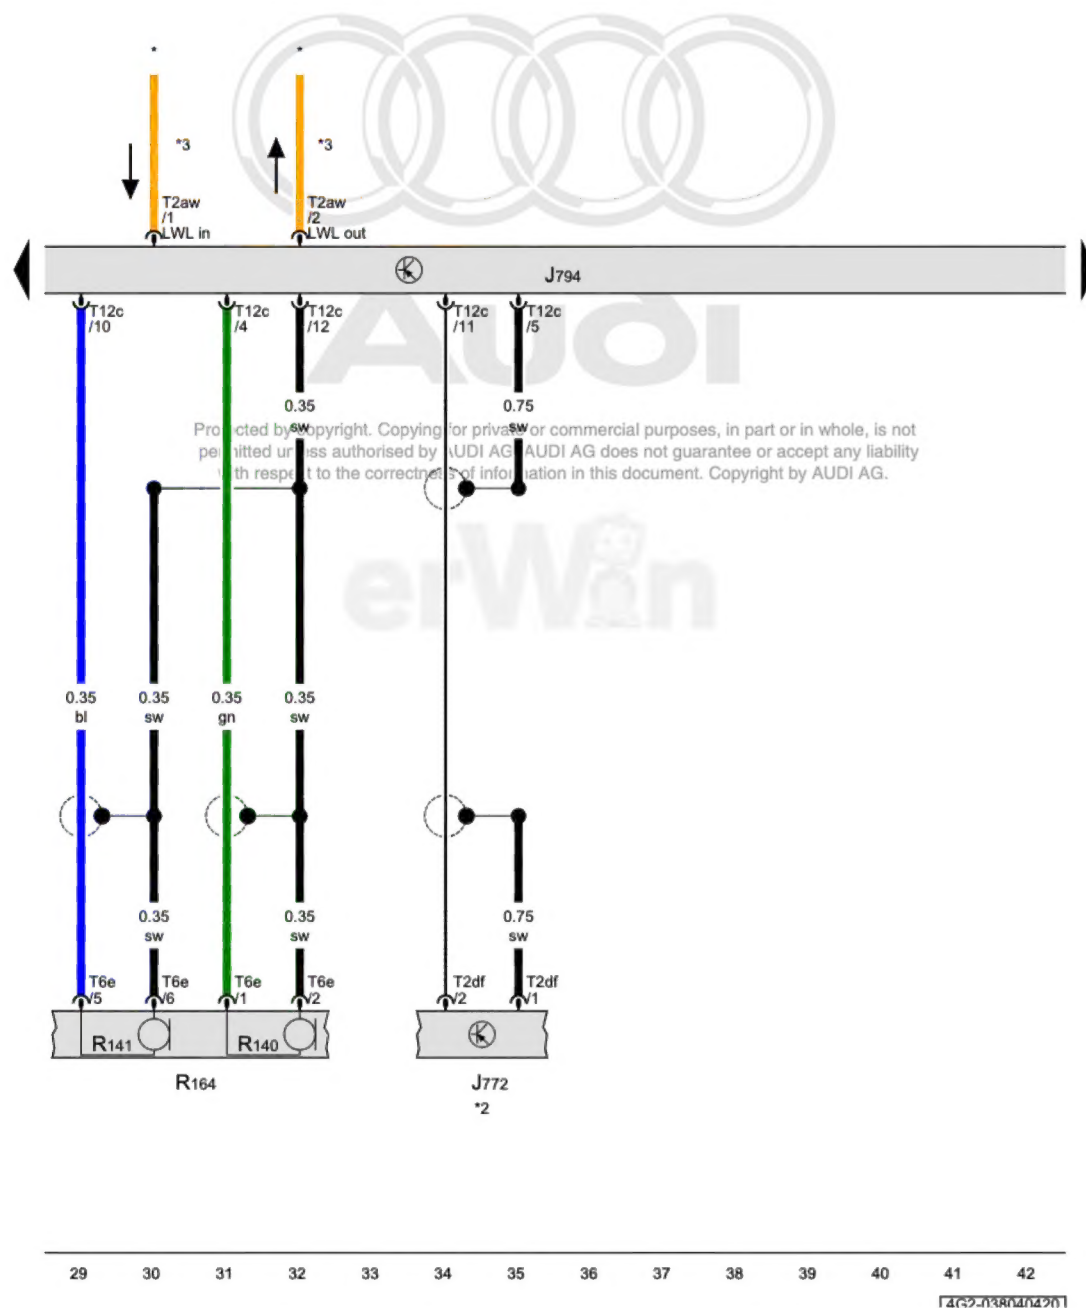

# Information Electronics Control Module 1, Microphone Unit in Front Roof Module

- J772 Rearview Camera System Control Module
- J794 Information Electronics Control Module 1
- R140 Left Front Microphone
- R141 Right Front Microphone
- R164 Microphone Unit in Front Roof Module
- T2aw 2-Pin Connector
- T2df 2-Pin Connector
- T6e 6-Pin Connector
- T12c 12-Pin Connector

\* Refer to Applicable Wiring Diagram for Data Bus Networking

\*2 For Vehicles with Rearview Camera System


\*3 Fiber Optic Cable

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Information Display Control Head, Information Electronics Control Module 1

- J685 Front Information Display Control Head
- J794 Information Electronics Control Module 1
- ST1 Fuse Panel 1
- SC2 Fuse 2 (On Fuse Panel C)
- T4de 4-Pin Connector
- T4df 4-Pin Connector
- T8ag 8-Pin Connector


- 45 Ground Connection Behind Instrument Panel, Center
- 213 Ground Connection (in Instrument Panel Wiring Harness)
- \* Refer to Applicable Wiring Diagram for Fuse Positions

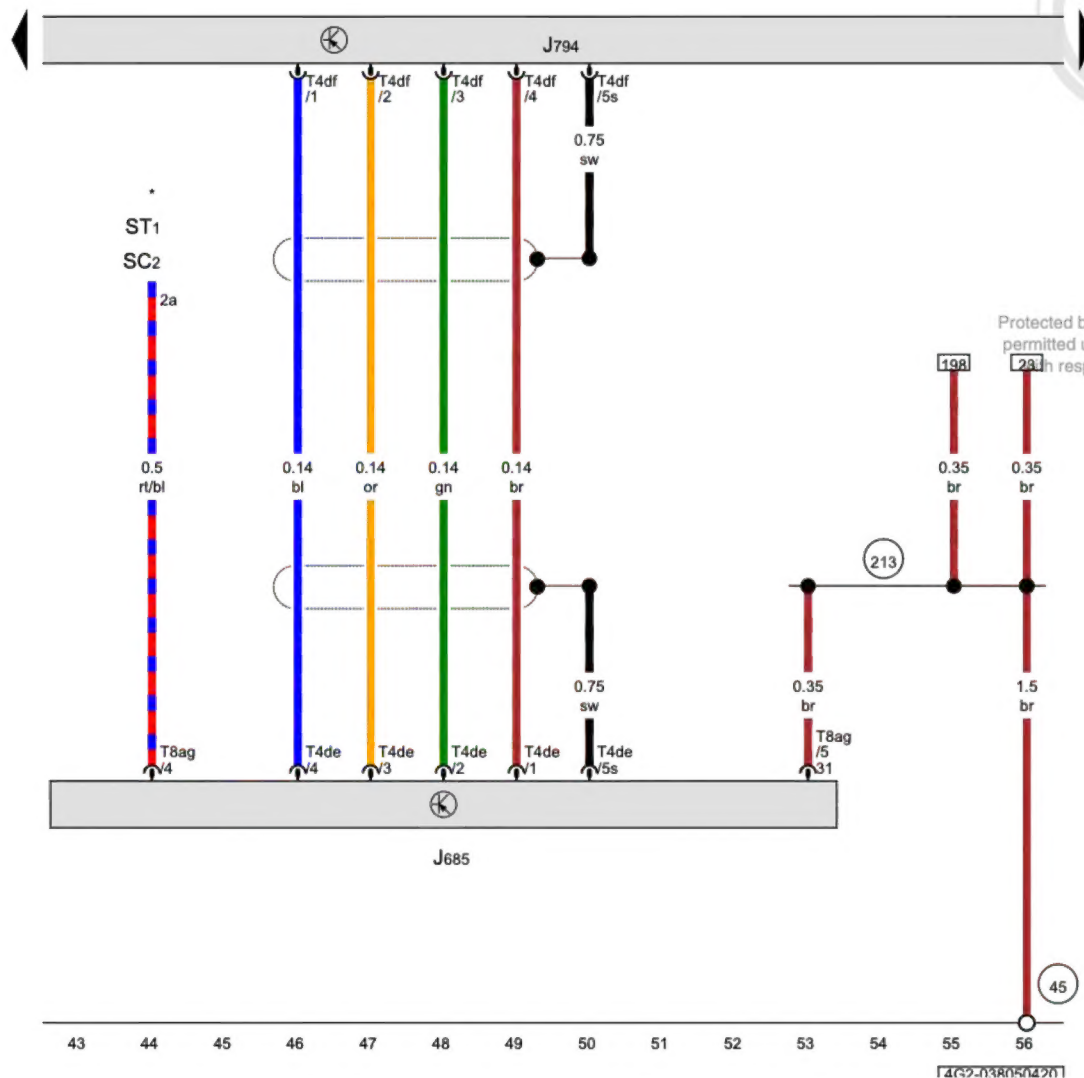

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Information Electronics Control Module 1, Antenna Amplifier  
3

- J794 Information Electronics Control Module 1
- R50 GPS Antenna
- R65 Telephone Antenna
- R112 Antenna Amplifier 3
- R170 Satellite Antenna
- R183 Digital Radio Antenna
- R216 Roof Antenna
- T2au 2-Pin Connector
- T2av 2-Pin Connector
- T2ax 2-Pin Connector
- T2bt 2-Pin Connector
- T2cg 2-Pin Connector
- T2ch 2-Pin Connector
- T2ck 2-Pin Connector
- \* For Vehicles with Cell Phone Preparation
- \*2 For USA Only

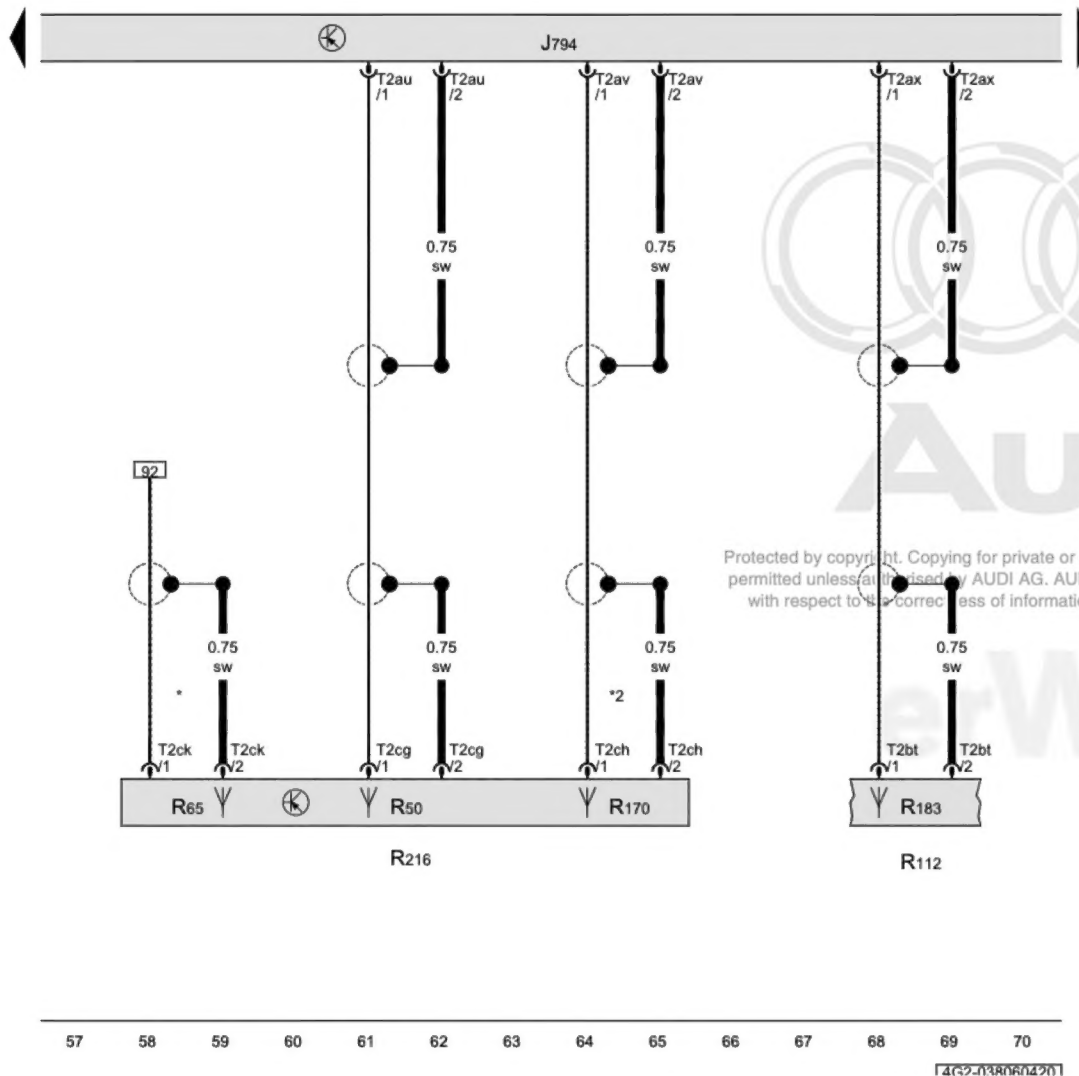

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




Information Electronics Control Module 1, Antenna Amplifier, Antenna Amplifier 2, Telephone Baseplate

- J794 Information Electronics Control Module 1
- R11 Antenna
- R24 Antenna Amplifier, Rear Window, Lower Left
- R93 Radio Antenna 2
- R111 Antenna Amplifier 2
- R126 Telephone Baseplate
- R152 Bluetooth Antenna
- ST2 Fuse Panel 2
- SF10 Fuse 10 (On Fuse Panel F)
- T2ar 2-Pin Connector
- T2bw 2-Pin Connector
- T4ab 4-Pin Connector
- T4aq 4-Pin Connector
- T4y 4-Pin Connector, Near the Telephone Baseplate
- T5l 5-Pin Connector
- T12c 12-Pin Connector
- T12d 12-Pin Connector

B478 Connection 14 (in Main Wiring Harness)

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 For Vehicles with Bluetooth Antenna
- \*3 From June 2011

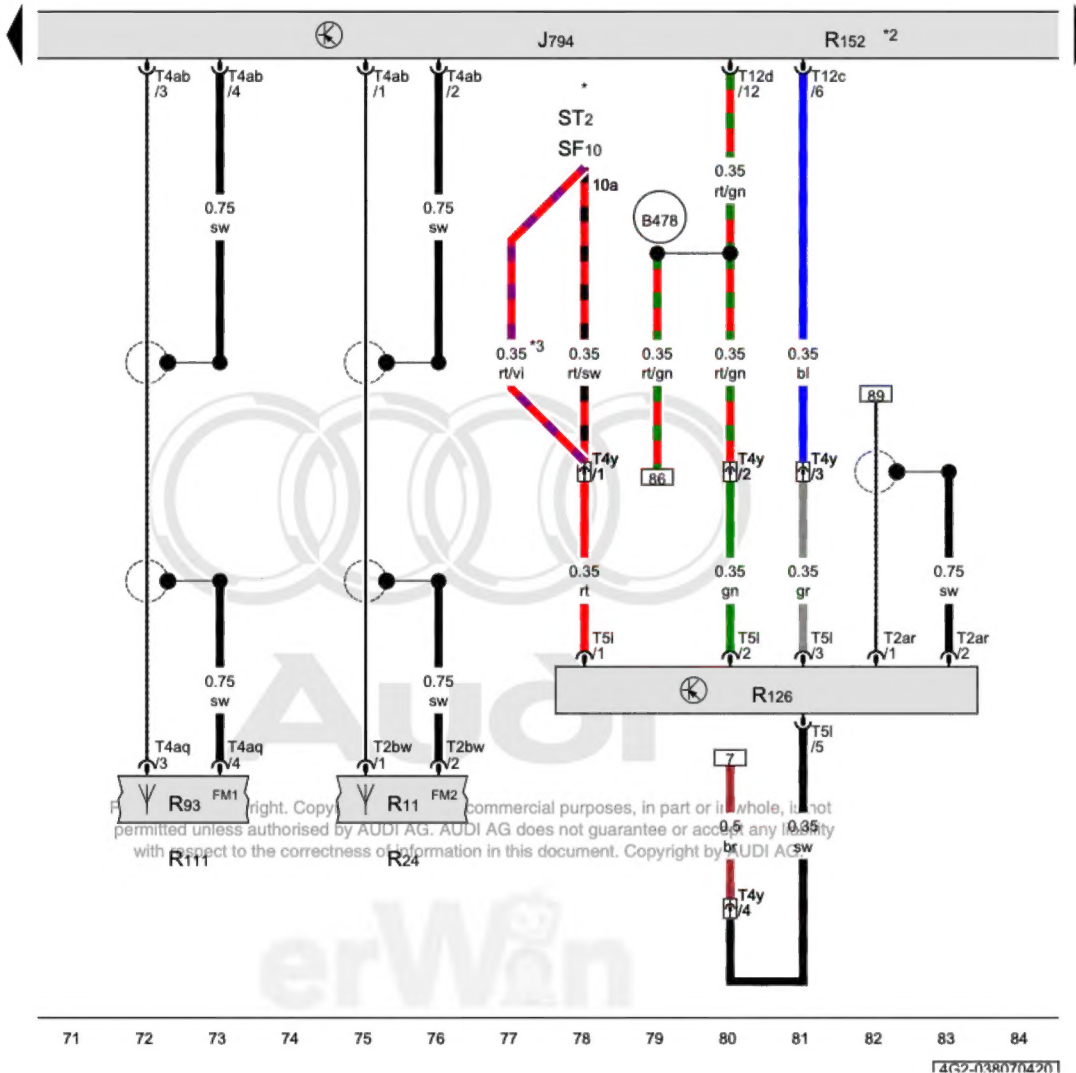


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Information Electronics Control Module 1, Cellular Telephone Amplifier

J794 Information Electronics Control Module 1  
R86 Cellular Telephone Amplifier  
ST2 Fuse Panel 2  
SF10 Fuse 10 (On Fuse Panel F)  
T2dc 2-Pin Connector  
T2dd 2-Pin Connector  
T4az 4-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- 389 Ground Connection 24 (in Main Wiring Harness)

\* Not for USA  
\*2 Refer to Applicable Wiring Diagram for Fuse Positions  
\*3 Avant  
\*4 From June 2011

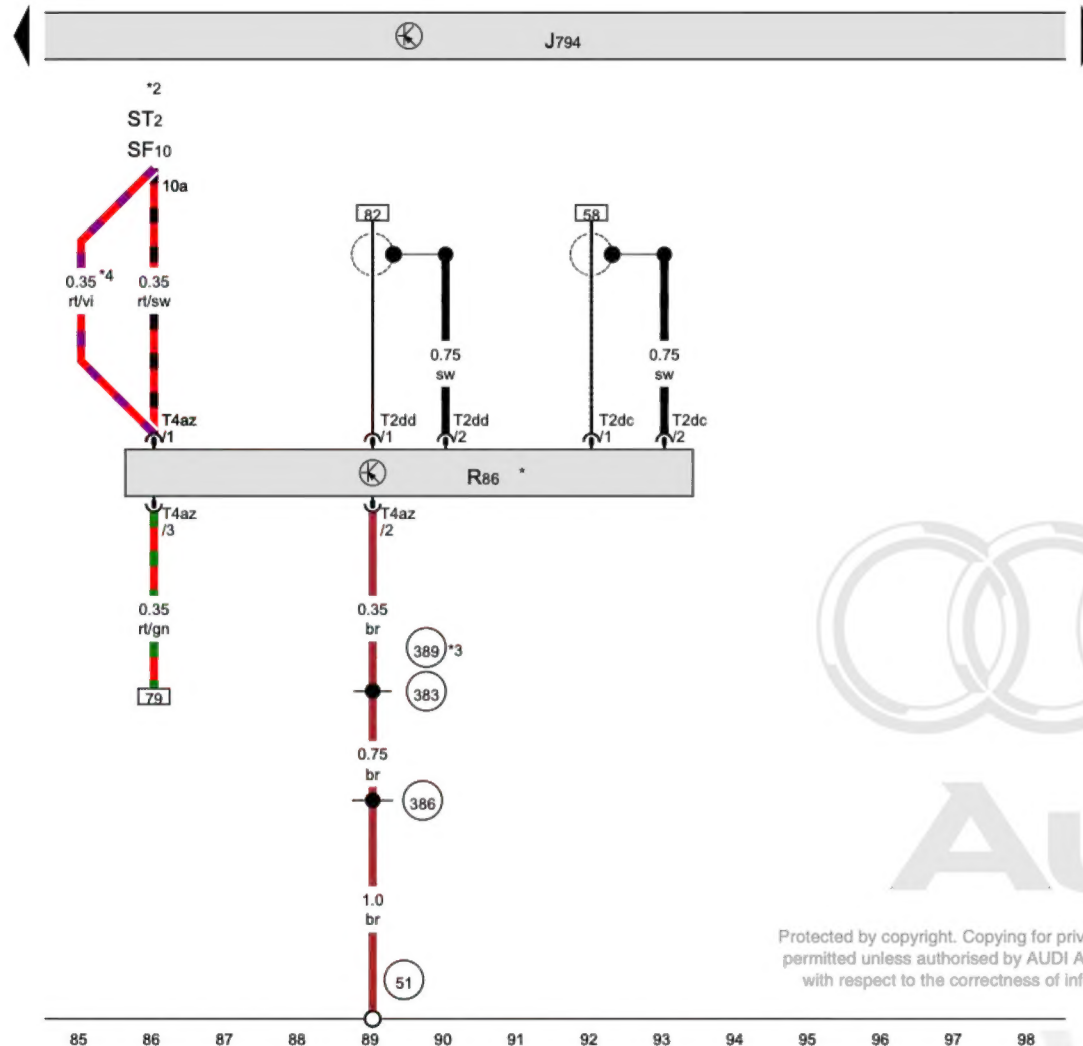


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Information Electronics Control Module 1, External Audio Source Connection

- J794 Information Electronics Control Module 1
- R199 External Audio Source Connection
- T12e 12-Pin Connector
- T30b 30-Pin Connector
- \* For Vehicles with External Audio Source Connection - Audi Music Interface
- \*2 Running Change

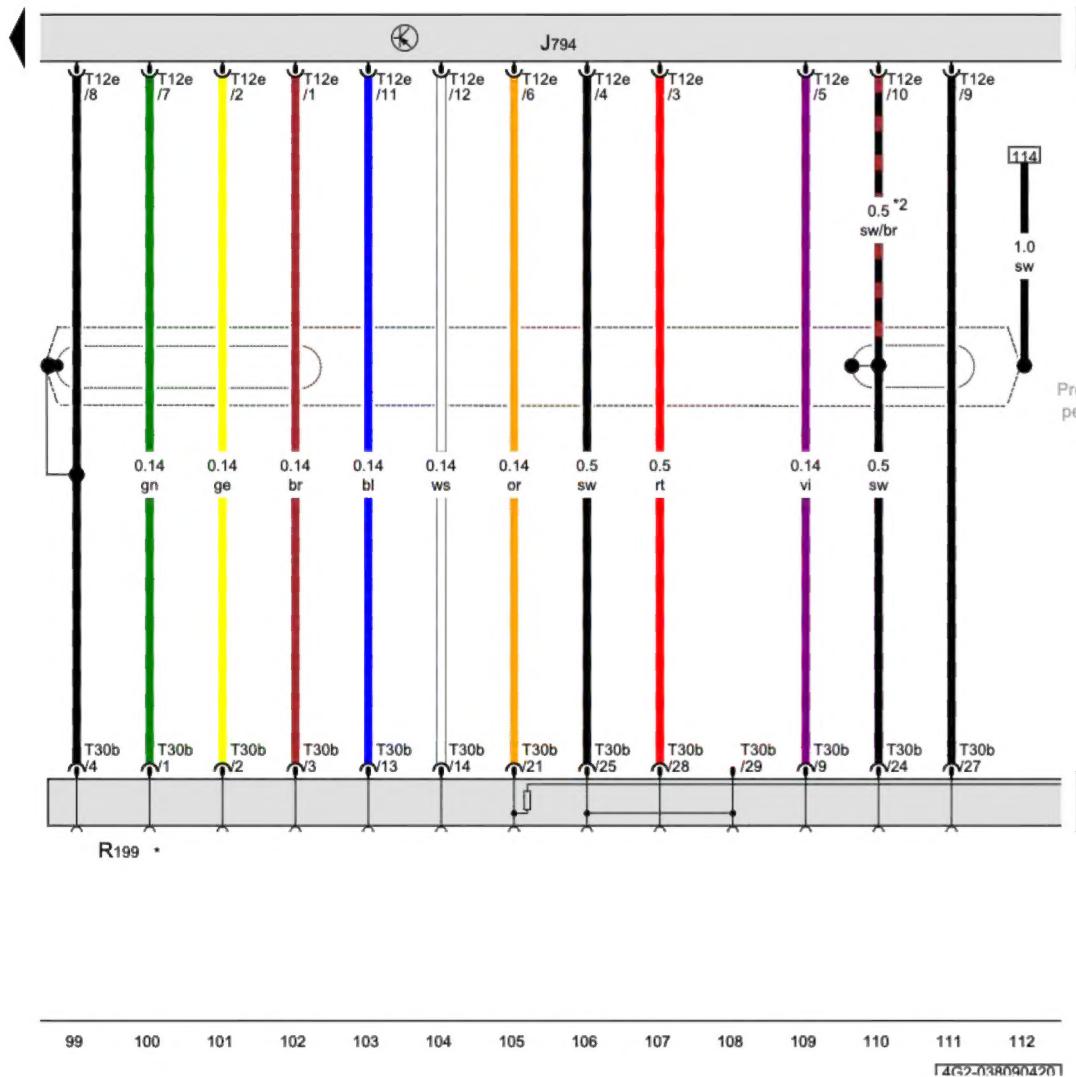

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

J794	Information Electronics Control Module 1
R199	External Audio Source Connection
T4ex	4-Pin Connector
T4ey	4-Pin Connector, In the Center Console
T4z	4-Pin Connector
T12e	12-Pin Connector
T30b	30-Pin Connector
*	For Vehicles with External Audio Source Connection - AUX-IN Connection
*2	Ground via Connector Housing

 


ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

Digital Sound System Control Module, Microphone Unit in Front Roof Module

- J525 Digital Sound System Control Module
- R74 Interior Microphone
- R164 Microphone Unit in Front Roof Module
- SF1 Fuse 1 (On Fuse Panel F)
- ST3 Fuse Panel 3
- T2ca 2-Pin Connector
- T6e 6-Pin Connector
- T38 38-Pin Connector

- 50 Ground Connection in Luggage Compartment, Left

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Fiber Optic Cable
- \*3 Refer to Applicable Wiring Diagram for Data Bus Networking

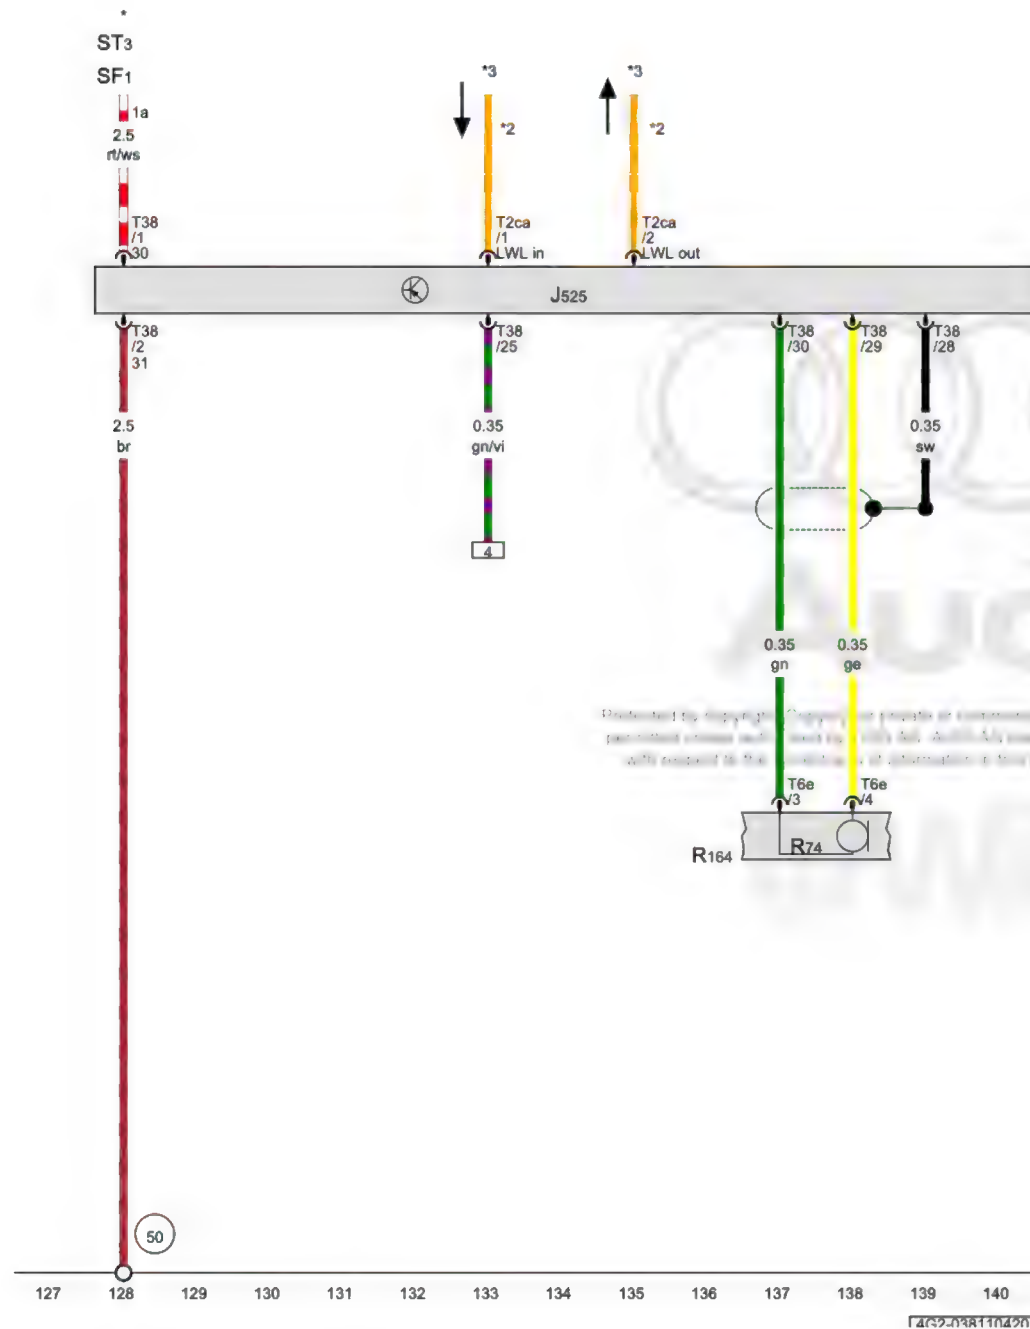


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Digital Sound System Control Module, Left Front Treble Speaker, Right Front Midrange Speaker, Center Speaker

- J525 Digital Sound System Control Module
- R20 Left Front Treble Speaker
- R22 Right Front Treble Speaker
- R103 Left Front Midrange Speaker
- R104 Right Front Midrange Speaker
- R208 Center Speaker
- T2gr 2-Pin Connector
- T2gt 2-Pin Connector
- T2gw 2-Pin Connector
- T2gx 2-Pin Connector
- T2gy 2-Pin Connector
- T17l 17-Pin Connector, In the Left A-Pillar Connector Station
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T27b 27-Pin Connector, On the Right A-Pillar
- T38 38-Pin Connector

\* From June 2011

Protected by copyright. Copying for private or commercial purposes in part or in whole is not permitted without the written consent of AUDI AG. AUDI AG does not guarantee the accuracy and liability with respect to the correctness of the information in this document. Copyright by AUDI AG.

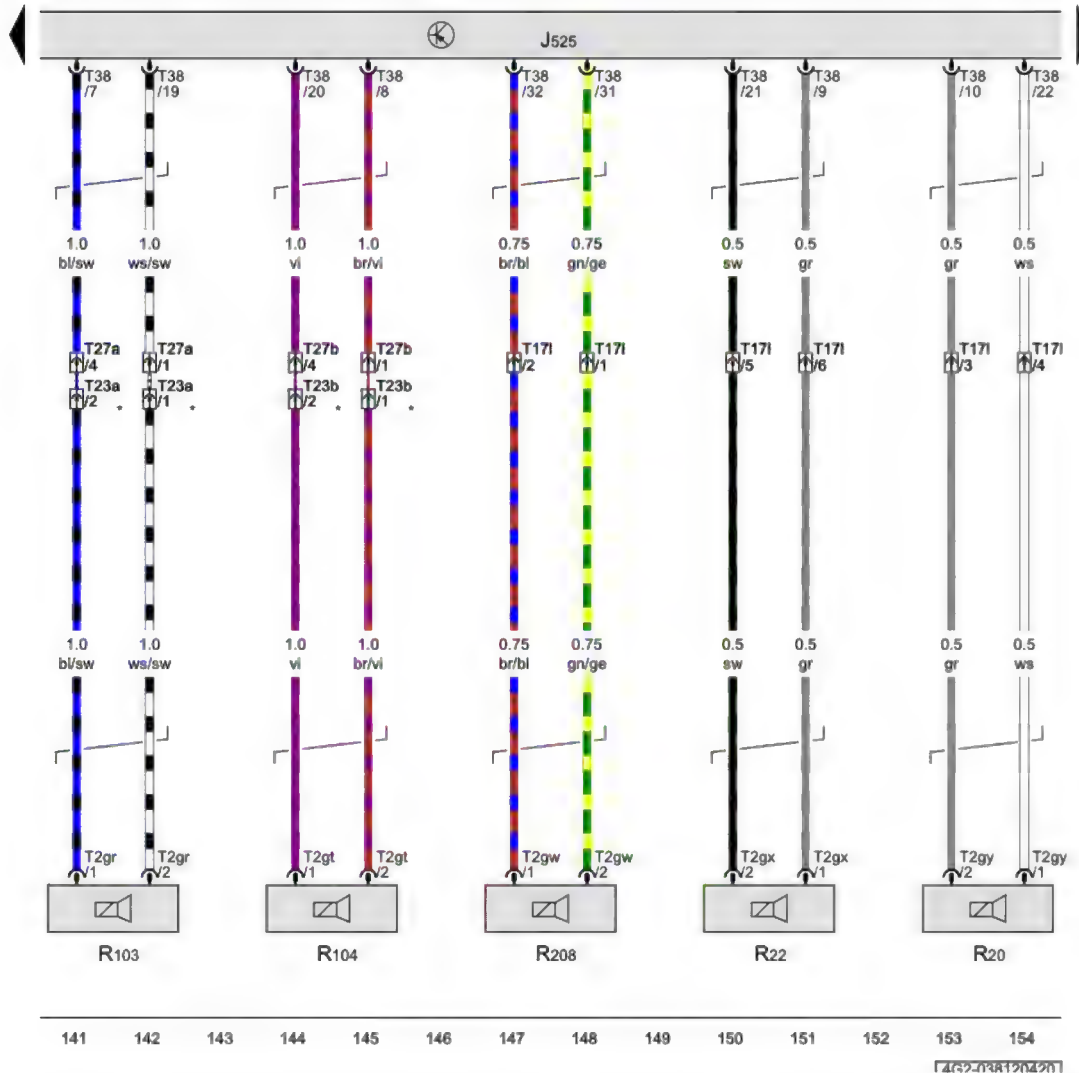




Digital Sound System Control Module, Left Rear Treble Speaker, Right Rear Mid-Bass Speaker, Subwoofer

- J525 Digital Sound System Control Module
- R14 Left Rear Treble Speaker
- R16 Right Rear Treble Speaker
- R159 Left Rear Mid-Bass Speaker
- R160 Right Rear Mid-Bass Speaker
- R211 Subwoofer
- T2go 2-Pin Connector
- T2gv 2-Pin Connector
- T2gz 2-Pin Connector
- T2ha 2-Pin Connector
- T2hb 2-Pin Connector
- T4fs 4-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- T38 38-Pin Connector

- (729) Ground Connection on Left Rear Wheel Housing
- (R71) Speaker Positive Connection (in Left Rear Door Wiring Harness)
- (R72) Speaker Negative Connection (in Left Rear Door Wiring Harness)
- (R73) Speaker Positive Connection (in Right Rear Door Wiring Harness)
- (R74) Speaker Negative Connection (in Right Rear Door Wiring Harness)

\* Depending on Equipment


ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

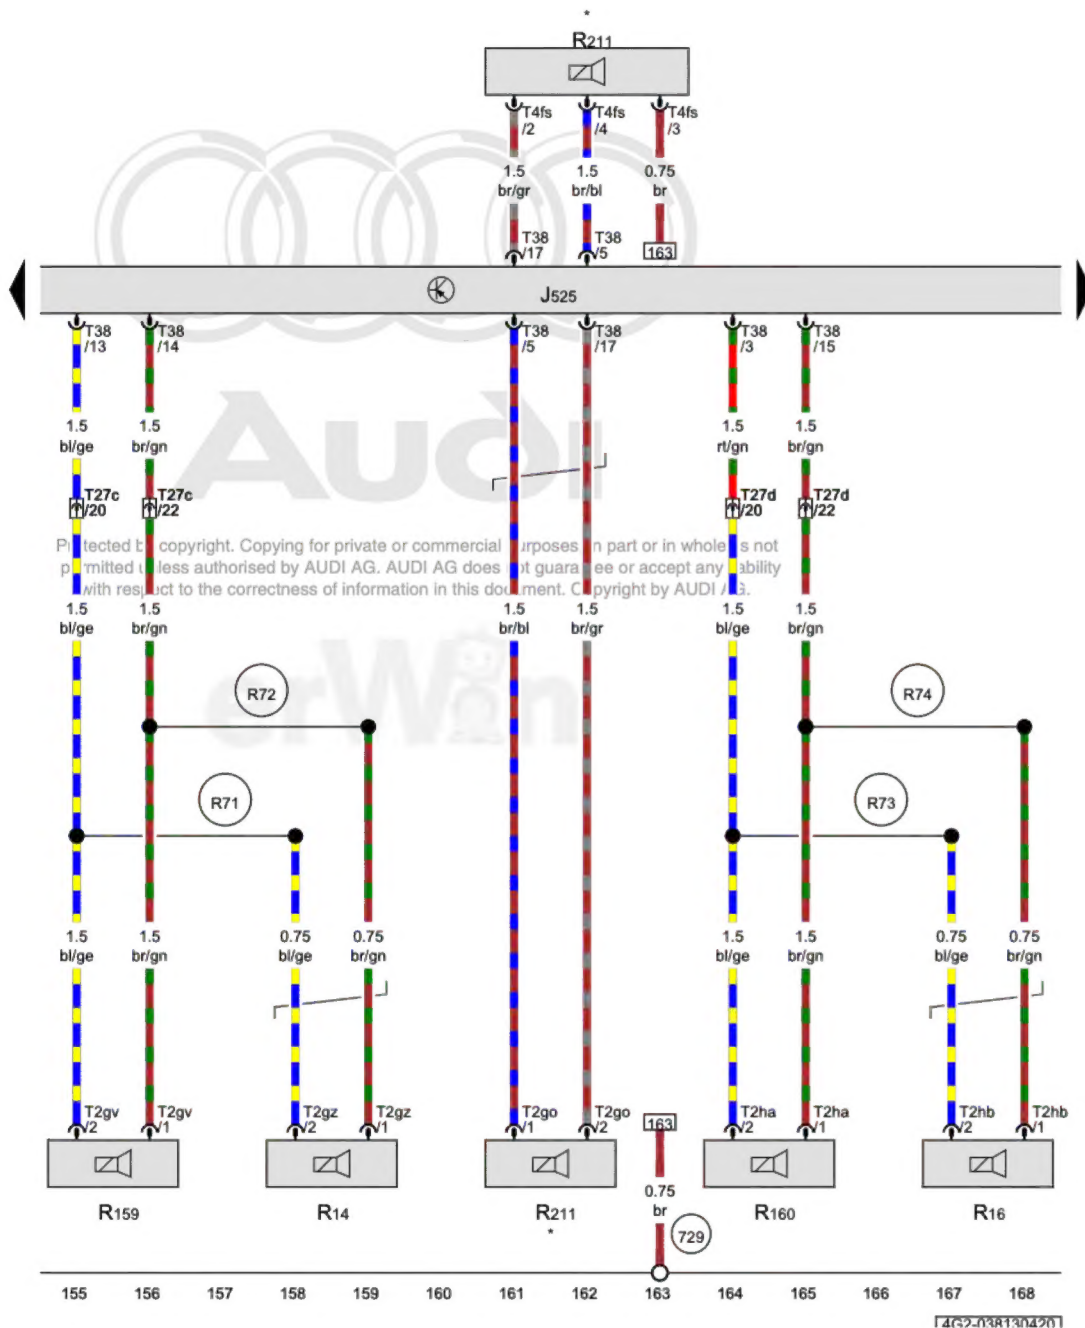



Digital Sound System Control Module, Left Front Bass Speaker, Right Front Bass Speaker, Right Effects Speaker

- J525 Digital Sound System Control Module
- R21 Left Front Bass Speaker
- R23 Right Front Bass Speaker
- R209 Left Effects Speaker
- R210 Right Effects Speaker
- T2gp 2-Pin Connector
- T2gq 2-Pin Connector
- T2gs 2-Pin Connector
- T2gu 2-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T27b 27-Pin Connector, On the Right A-Pillar
- T38 38-Pin Connector
- \* From June 2011

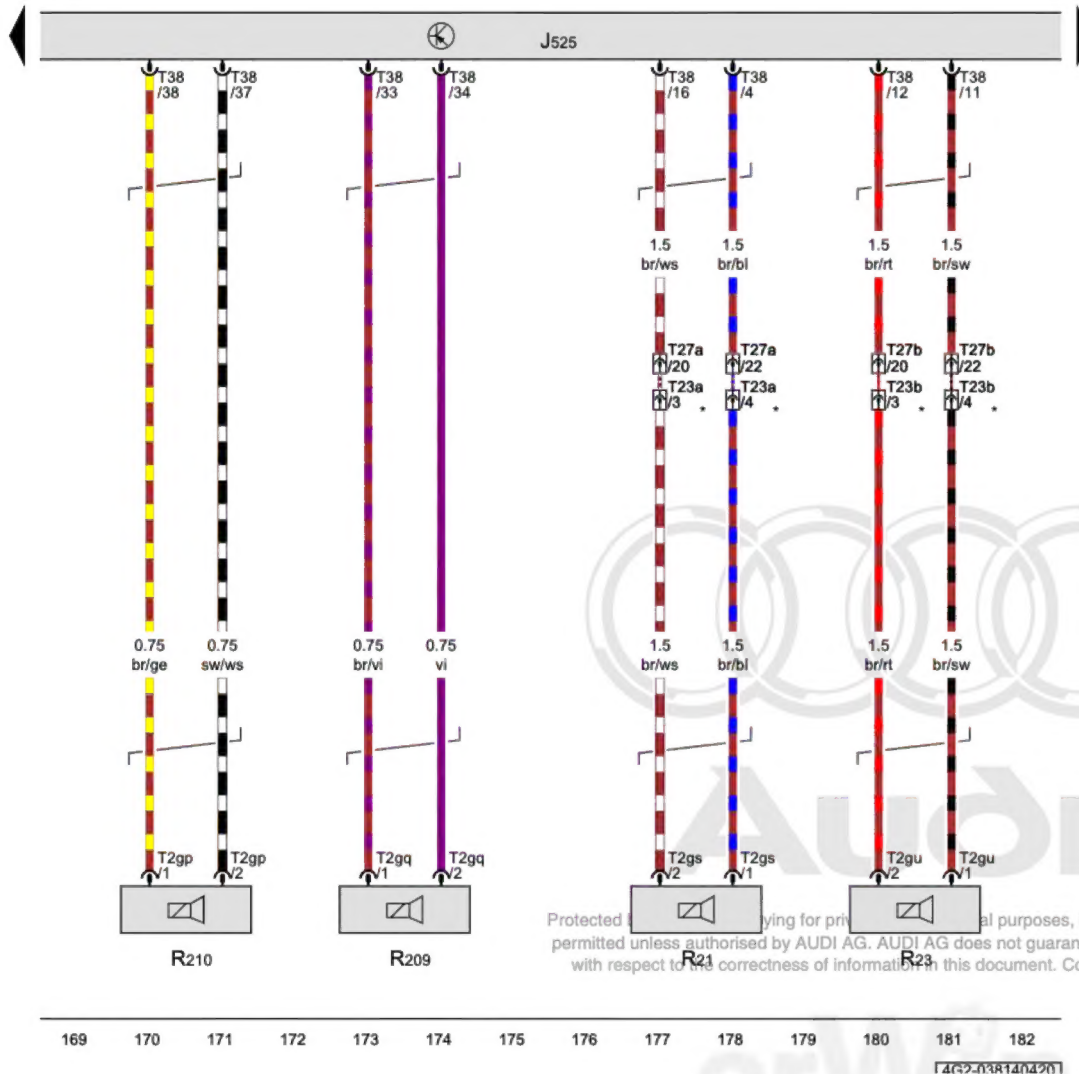


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Digital Sound System Control Module, Left Center  
Microphone, Left Rear Microphone

- J525 Digital Sound System Control Module
- J623 Engine/Motor Control Module
- J931 Assembly Mount Control Module
- R142 Left Center Microphone
- R143 Right Center Microphone
- R144 Left Rear Microphone
- R145 Right Rear Microphone
- T8bb 8-Pin Connector, On the Left C-Pillar
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T18i 18-Pin Connector

397 Ground Connection 32 (in Main Wiring Harness)


- \* Depending on Equipment
- \*2 Refer to Applicable Engine Wiring Diagram

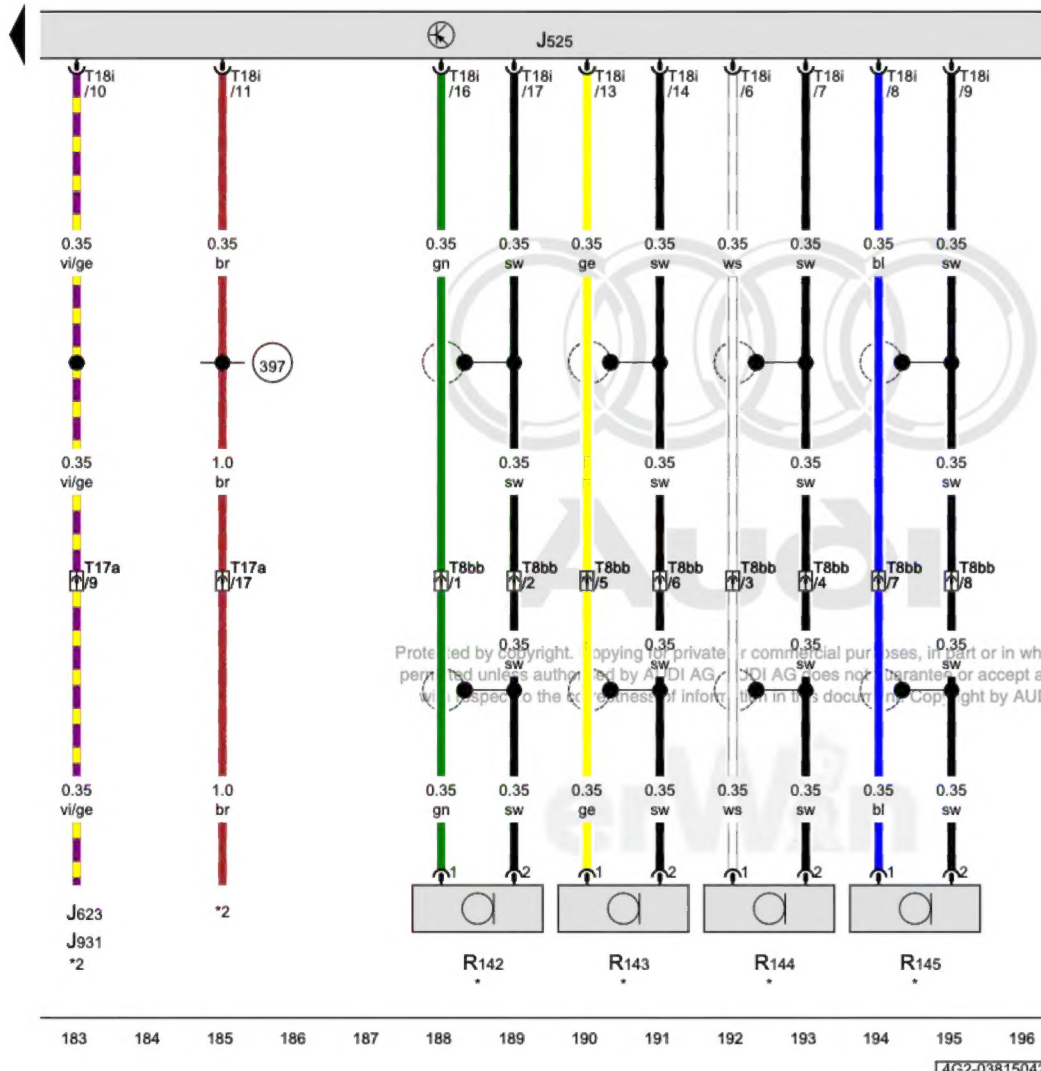

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

# CD Changer

- R41 CD Changer
- ST1 Fuse Panel 1
- SC3 Fuse 3 (On Fuse Panel C)
- T2qs 2-Pin Connector
- T8q 8-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- \* For Vehicles with CD Changer
- \*2 Refer to Applicable Wiring Diagram for Fuse Positions
- \*3 Refer to Applicable Wiring Diagram for Data Bus Networking
- \*4 Fiber Optic Cable

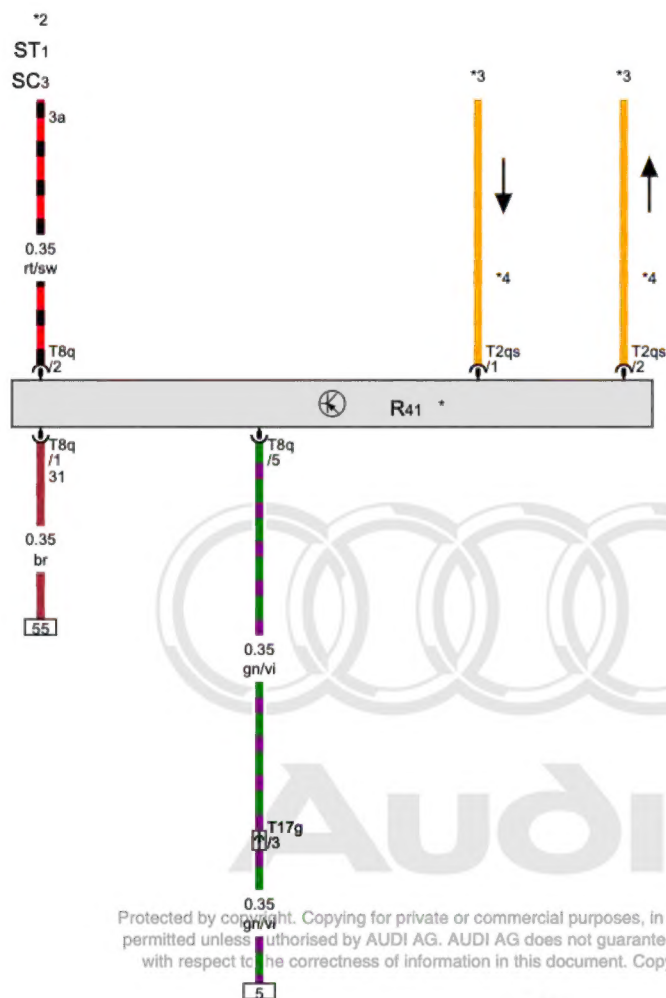

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink